



## Upgrade guide

1. You need to prepare a RS485 to USB upgrade cable, as show in the following picture. Disconnect the communication cable between the communication box and the inverter. Use this cable to connect com-box`s BMS-485 port and computer`s USB port and then setting all DIP switch is off.


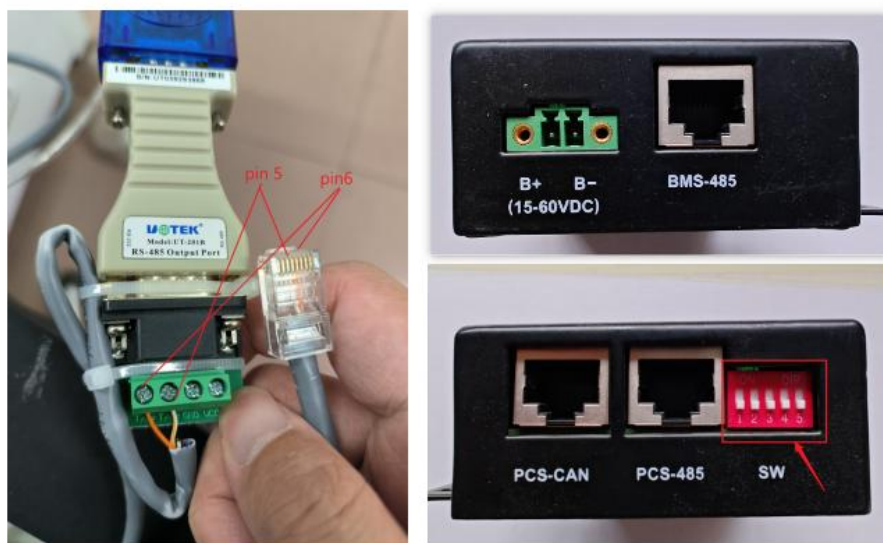



2. Run the software as an administrator, then click this button.

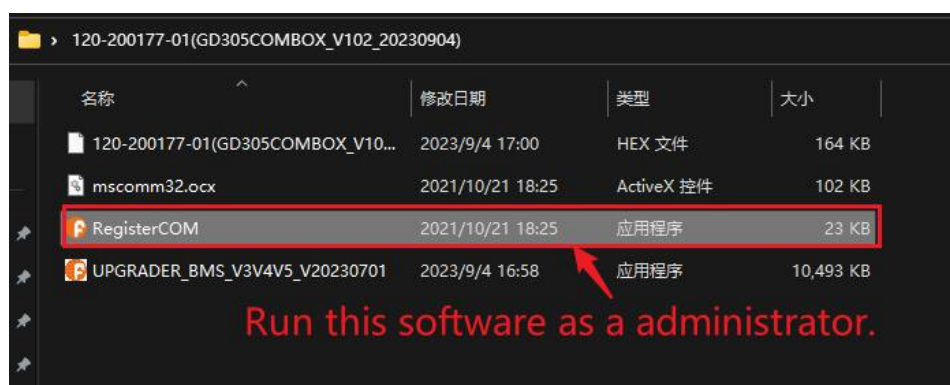



3. Double click to open this software select address is 00 and then select upgrade file.

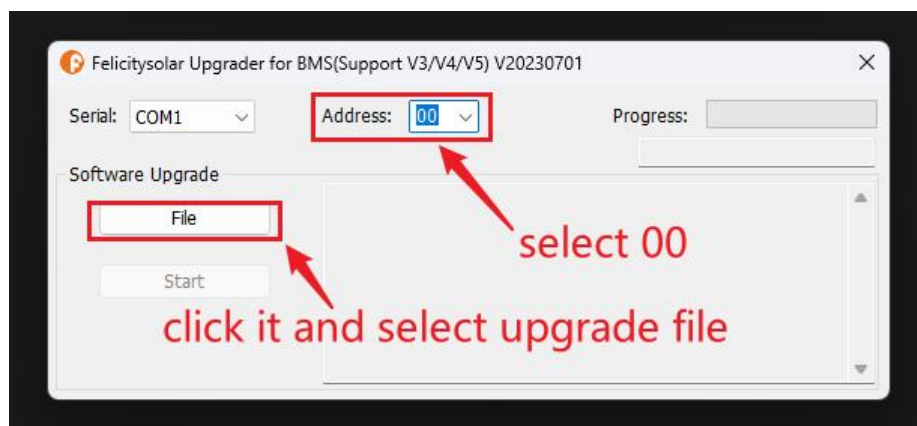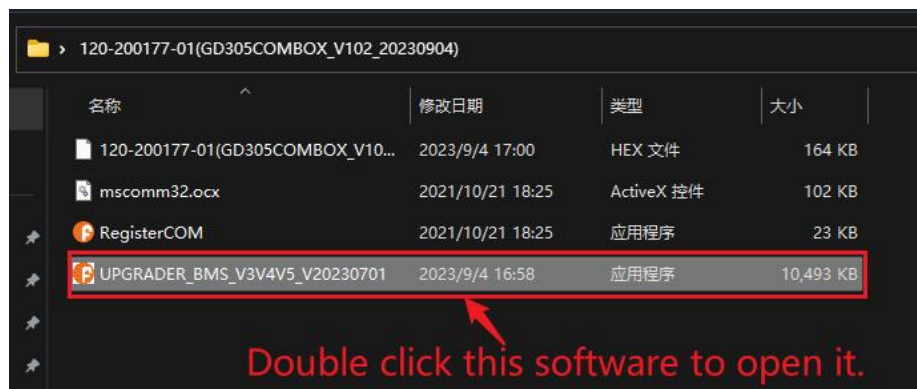

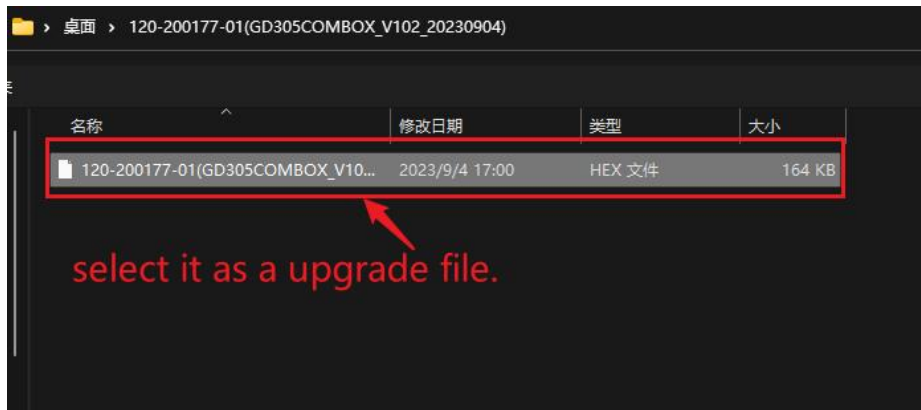

4. Click start button and it will upgrade.

