


Remove both links if the load is less than 850W

Frequency jumper:

- If the installation frequency is 50 Hz, remove the frequency jumper, or place it on only one of the pins (this is the default setting).
- If the installation frequency is 60 Hz, place the jumper on both pins.

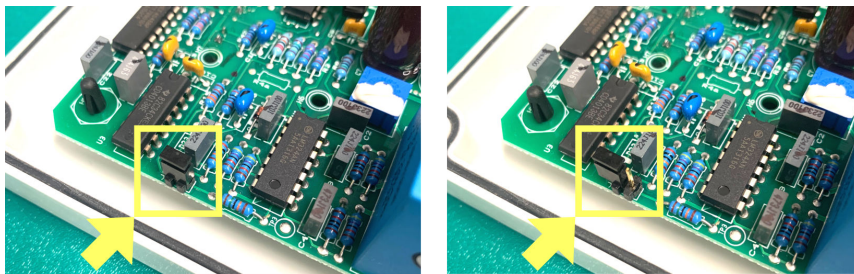

Jumper placed = 50Hz Jumper not placed = 60Hz