


1200W MultiPlus

NOTE: SEE NOMADIC ENERGY EBOOK FOR WIRING EACH SPECIFIC COMPONENT AND FOR FURTHER INSTALLATION GUIDANCE

ALL EARTH CABLES (YELLOW & GREEN) SHOULD BE WIRED WITH BLACK CABLE. THE COLOUR IS FOR ILLUSTRATION PURPOSES ONLY. ADDITIONAL BLACK CABLE HAS BEEN PROVIDED.

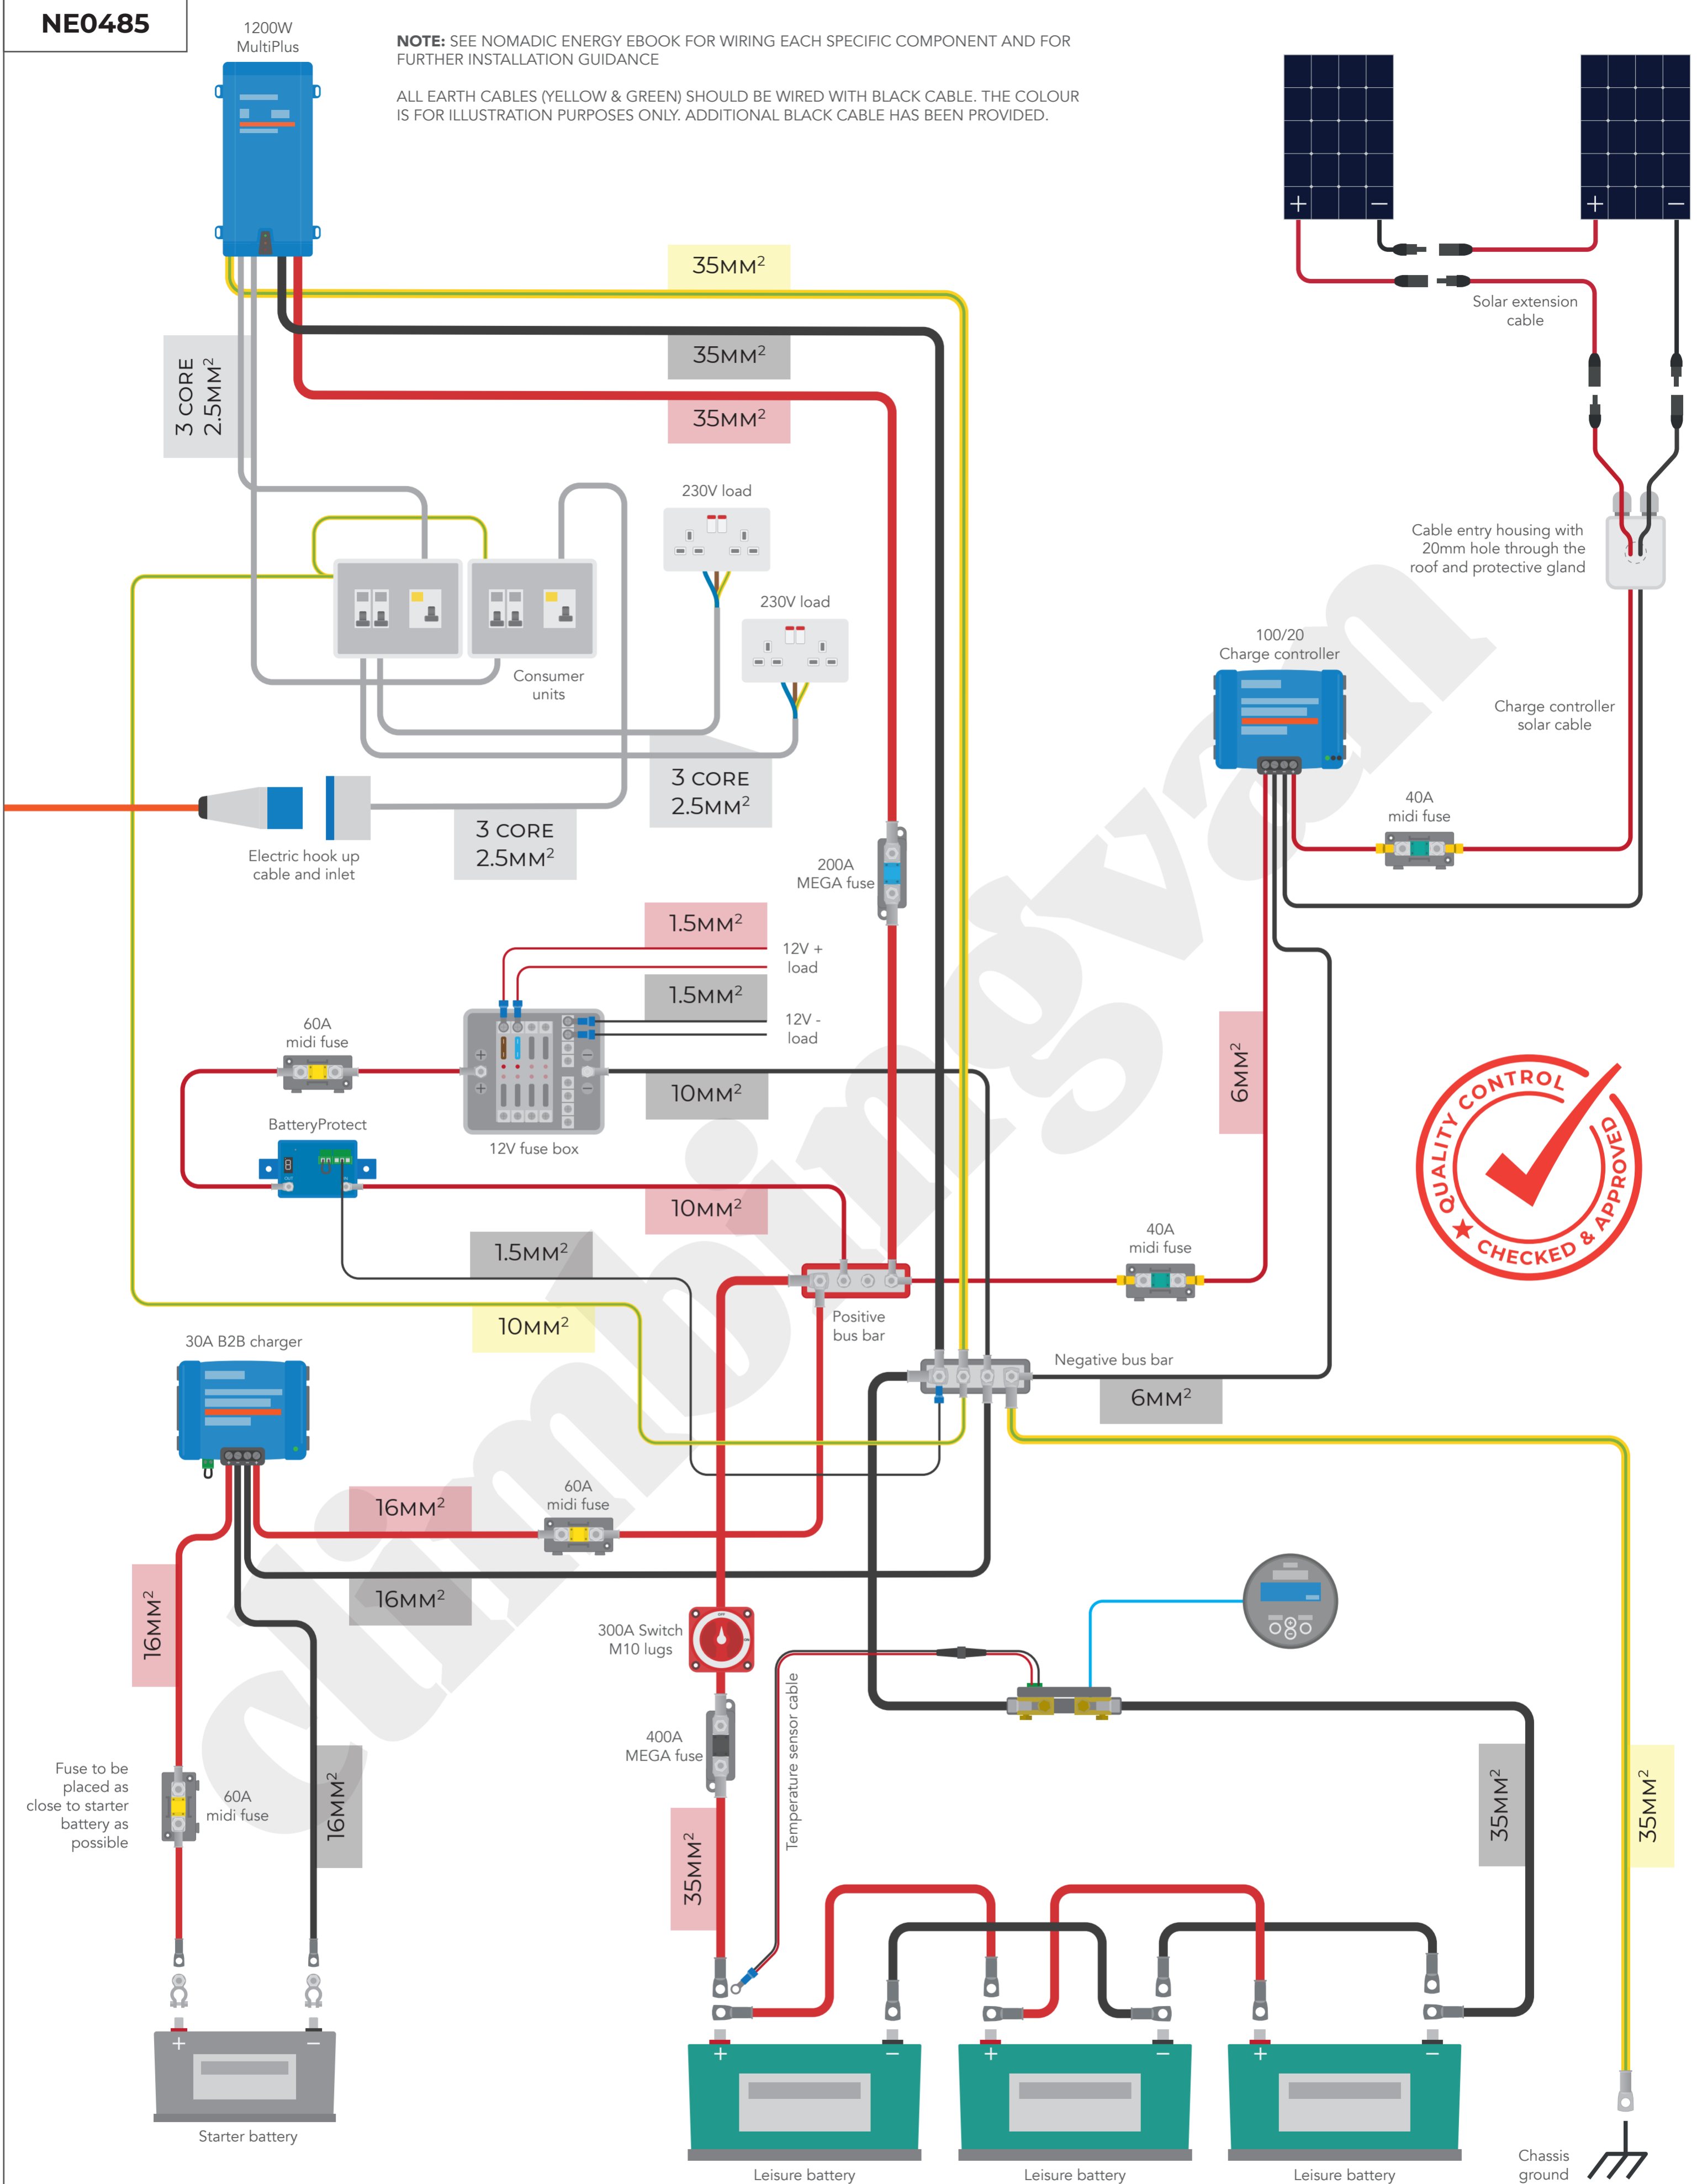

Fuse to be placed as close to starter battery as possible

SAFETY WARNING

Electricity is dangerous. It only takes a very small amount of current across the human heart to stop it. Electrical work should always be carried out by a qualified electrician, or at the very least your system should be checked by a qualified electrician before it is fully connected. The local safety guidelines and requirements should always be followed.

Our electrical system design service makes off-grid energy simple.

climbingvan.co.uk/nomadic-energy

NOMADIC
energy

by **climbingvan**